



As the crankshaft rotates, a slot in the crankshaft (valve) aligns with the intake and an air and fuel mixture flows through the crankcase, bearing and a hole in the crankshaft into the crankcase space below the piston. As the crankshaft continues to rotate, the crankshaft valve closes. (Counter clockwise rotation.)